



RFB 18 INCH BARREL PARTS LIST

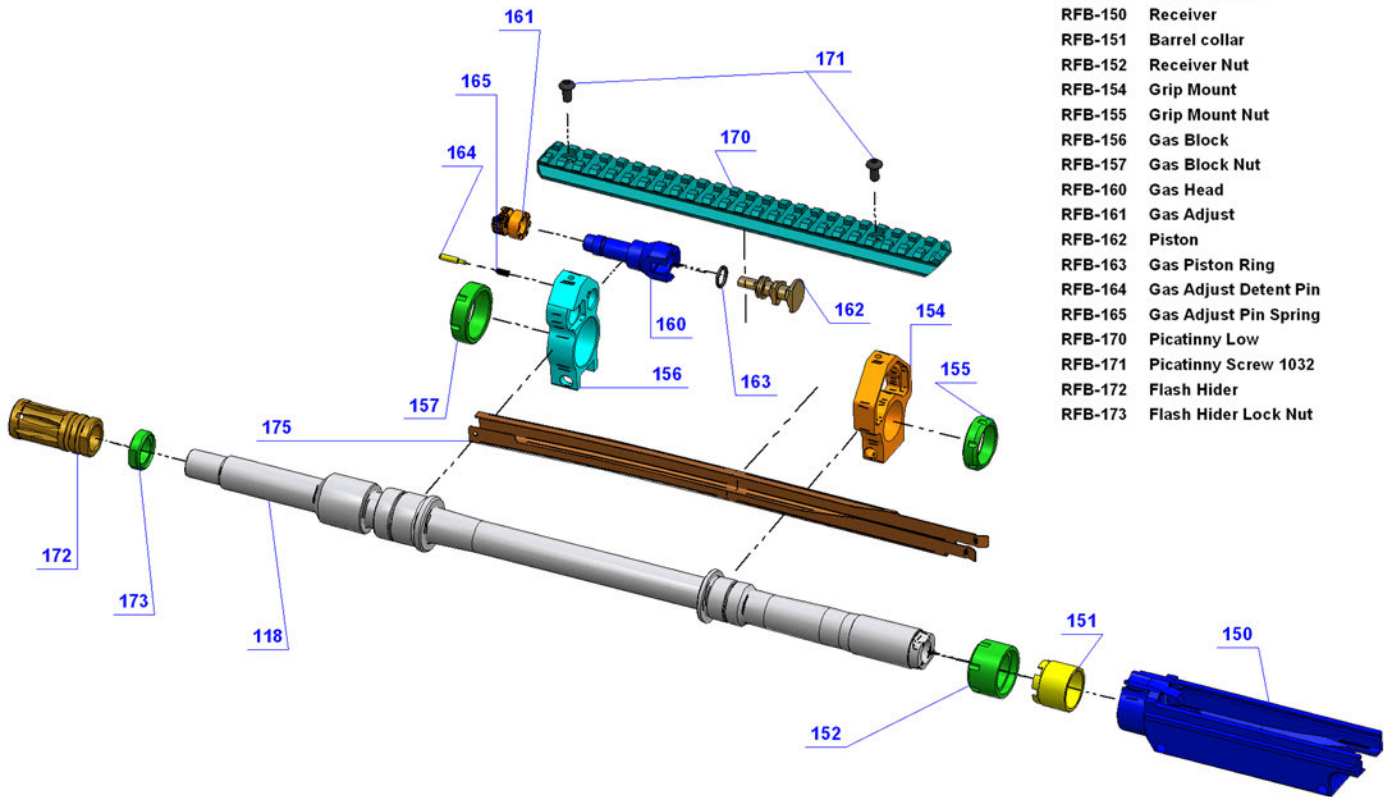


- RFB-118 Barrel Carbine
- RFB-150 Receiver
- RFB-151 Barrel collar
- RFB-152 Receiver Nut
- RFB-154 Grip Mount
- RFB-155 Grip Mount Nut
- RFB-156 Gas Block
- RFB-157 Gas Block Nut
- RFB-160 Gas Head
- RFB-161 Gas Adjust
- RFB-162 Piston
- RFB-163 Gas Piston Ring
- RFB-164 Gas Adjust Detent Pin
- RFB-165 Gas Adjust Pin Spring
- RFB-170 Picatinny Low
- RFB-171 Picatinny Screw 1032
- RFB-172 Flash Hider
- RFB-173 Flash Hider Lock Nut

RFB OPERATING HANDLE & BOLT PARTS LIST

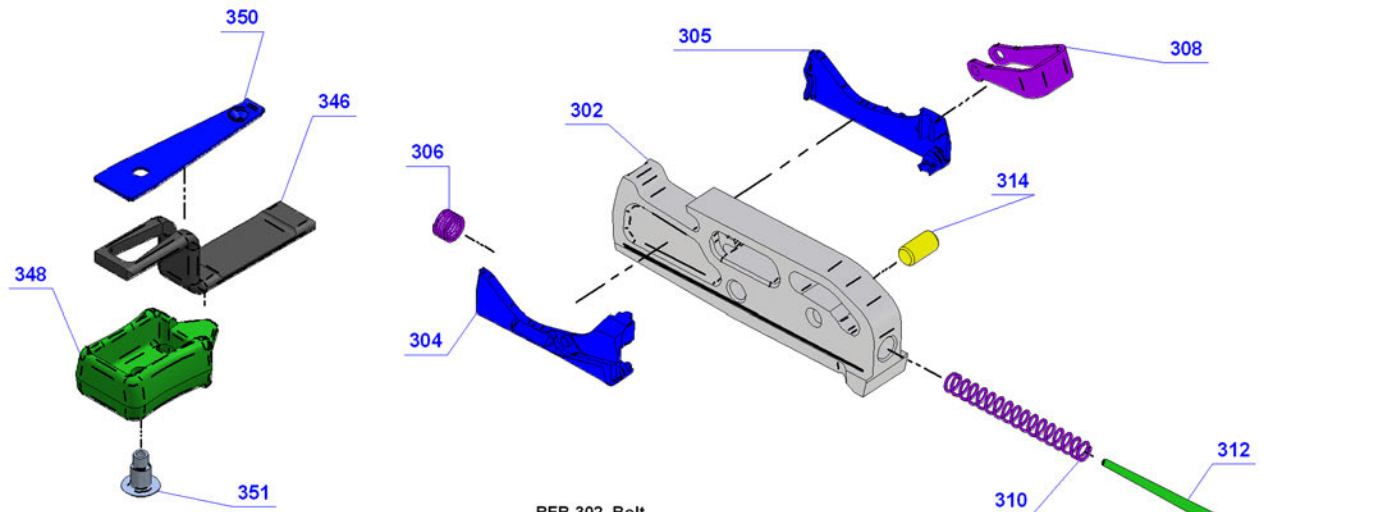


- RFB-346 Operating Handle
- RFB-348 Handle Molding
- RFB-350 Handle Snap
- RFB-351 Rivet

- RFB-302 Bolt
- RFB-304 Extractor Left
- RFB-305 Extractor Right
- RFB-306 Extractor Lift Spring
- RFB-308 Extractor Clamp Spring
- RFB-310 Firing Pin Spring
- RFB-312 Firing Pin
- RFB-314 Firing Pin Pin

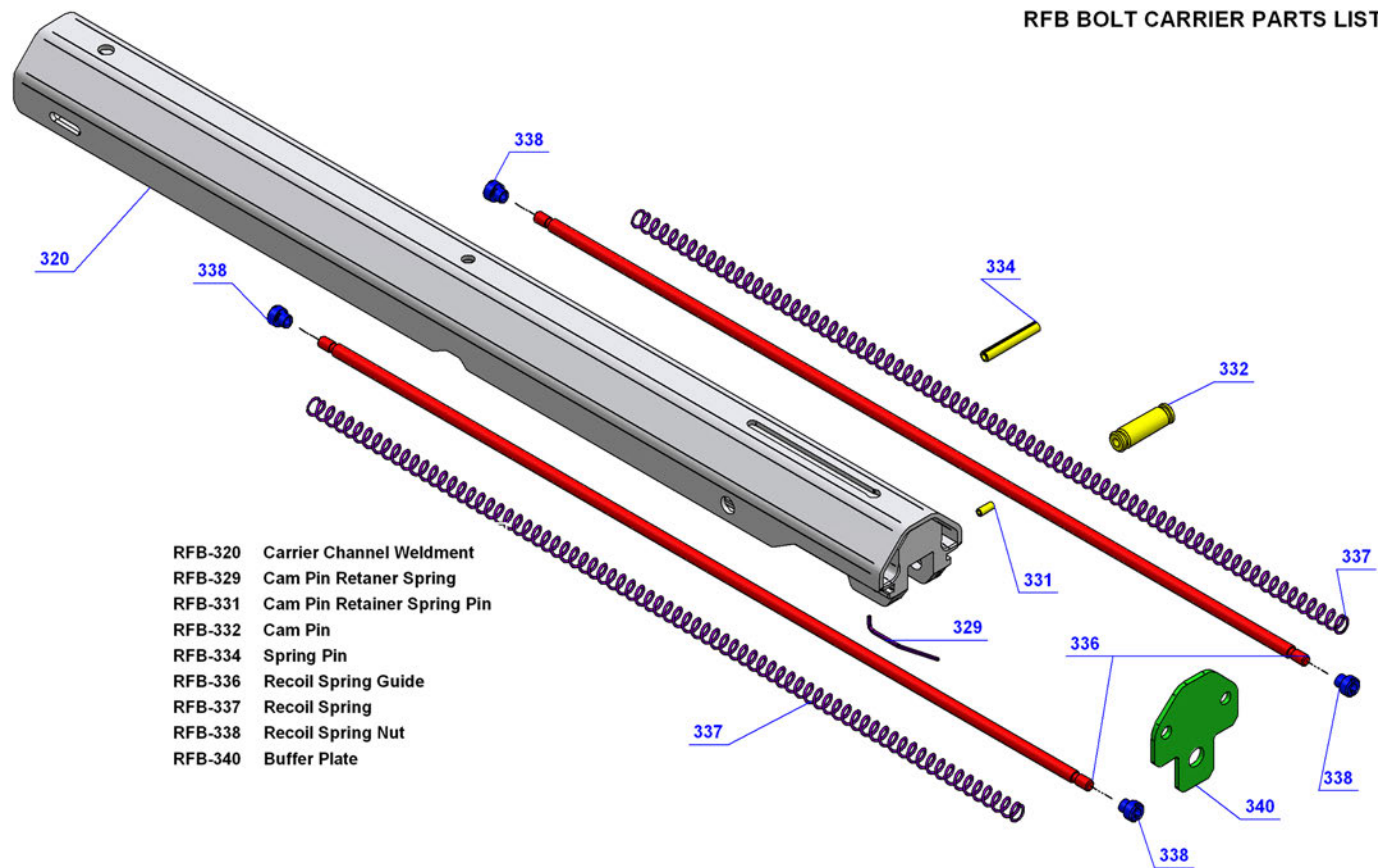

- RFB-320 Carrier Channel Weldment
 RFB-329 Cam Pin Retainer Spring
 RFB-331 Cam Pin Retainer Spring Pin
 RFB-332 Cam Pin
 RFB-334 Spring Pin
 RFB-336 Recoil Spring Guide
 RFB-337 Recoil Spring
 RFB-338 Recoil Spring Nut
 RFB-340 Buffer Plate

RFB GRIP PARTS LIST

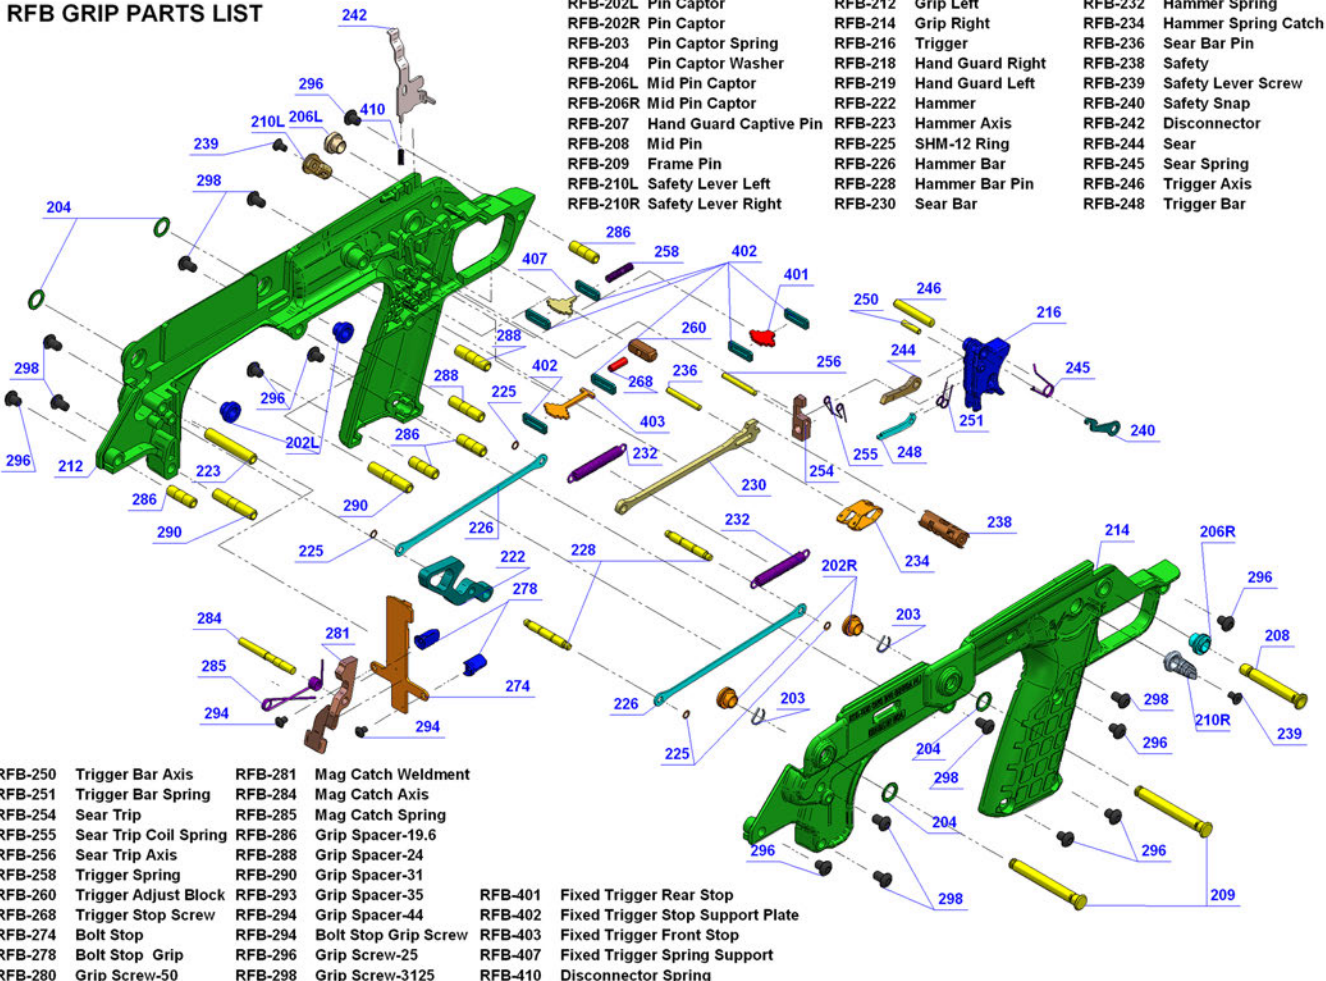


RFB-202L Pin Captor	RFB-212 Grip Left	RFB-232 Hammer Spring
RFB-202R Pin Captor	RFB-214 Grip Right	RFB-234 Hammer Spring Catch
RFB-203 Pin Captor Spring	RFB-216 Trigger	RFB-236 Sear Bar Pin
RFB-204 Pin Captor Washer	RFB-218 Hand Guard Right	RFB-238 Safety
RFB-206L Mid Pin Captor	RFB-219 Hand Guard Left	RFB-239 Safety Lever Screw
RFB-206R Mid Pin Captor	RFB-222 Hammer	RFB-240 Safety Snap
RFB-207 Hand Guard Captive Pin	RFB-225 Hammer Axis	RFB-242 Disconnector
RFB-208 Mid Pin	RFB-228 SHM-12 Ring	RFB-244 Sear
RFB-209 Frame Pin	RFB-226 Hammer Bar	RFB-245 Sear Spring
RFB-210L Safety Lever Left	RFB-228 Hammer Bar Pin	RFB-246 Trigger Axis
RFB-210R Safety Lever Right	RFB-230 Sear Bar	RFB-248 Trigger Bar

RFB-250 Trigger Bar Axis	RFB-281 Mag Catch Weldment
RFB-251 Trigger Bar Spring	RFB-284 Mag Catch Axis
RFB-254 Sear Trip	RFB-285 Mag Catch Spring
RFB-255 Sear Trip Coil Spring	RFB-286 Grip Spacer-19.6
RFB-256 Sear Trip Axis	RFB-288 Grip Spacer-24
RFB-258 Trigger Spring	RFB-290 Grip Spacer-31
RFB-260 Trigger Adjust Block	RFB-293 Grip Spacer-35
RFB-268 Trigger Stop Screw	RFB-294 Grip Spacer-44
RFB-274 Bolt Stop	RFB-294 Bolt Stop Grip Screw
RFB-278 Bolt Stop Grip	RFB-296 Grip Screw-25
RFB-280 Grip Screw-50	RFB-298 Grip Screw-3125


RFB-401 Fixed Trigger Rear Stop
RFB-402 Fixed Trigger Stop Support Plate
RFB-403 Fixed Trigger Front Stop
RFB-407 Fixed Trigger Spring Support
RFB-410 Disconnector Spring

RFB HANDGUARD PARTS LIST

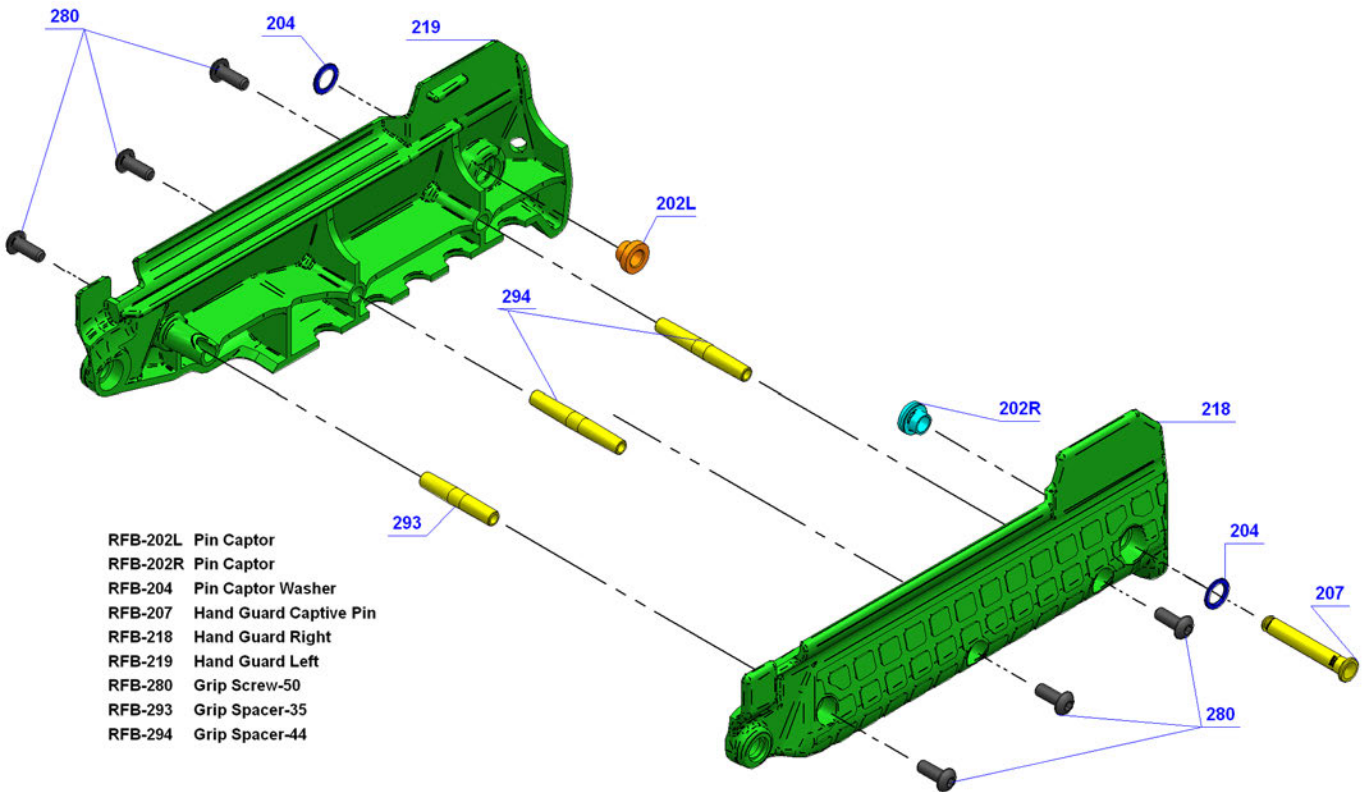

- RFB-202L Pin Captor
- RFB-202R Pin Captor
- RFB-204 Pin Captor Washer
- RFB-207 Hand Guard Captive Pin
- RFB-218 Hand Guard Right
- RFB-219 Hand Guard Left
- RFB-280 Grip Screw-50
- RFB-293 Grip Spacer-35
- RFB-294 Grip Spacer-44

RFB TOP COVER PARTS LIST

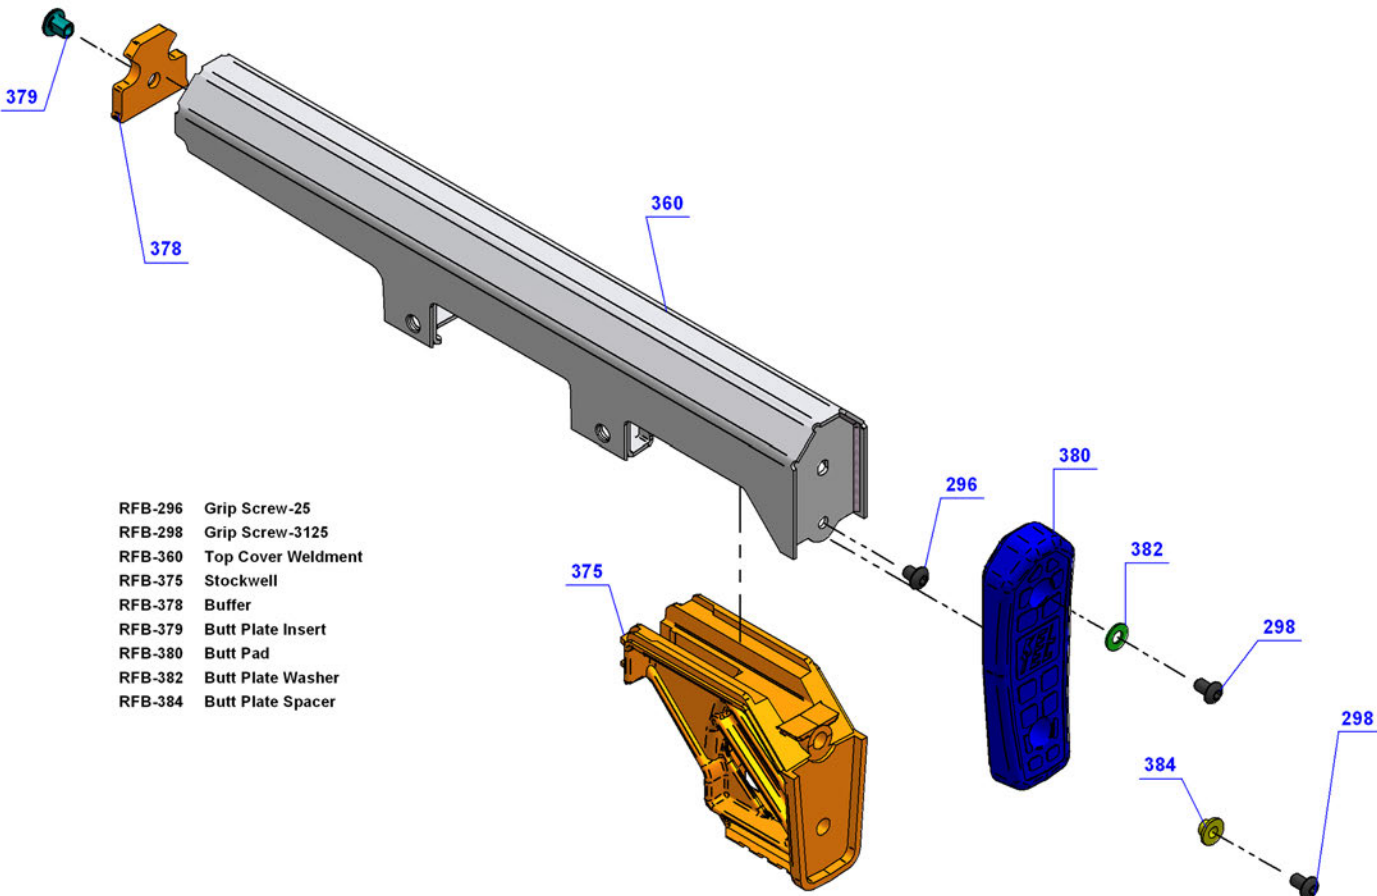

- RFB-296 Grip Screw-25
- RFB-298 Grip Screw-3125
- RFB-360 Top Cover Weldment
- RFB-375 Stockwell
- RFB-378 Buffer
- RFB-379 Butt Plate Insert
- RFB-380 Butt Pad
- RFB-382 Butt Plate Washer
- RFB-384 Butt Plate Spacer